



HP Pavilion 11-n010dx Battery Replacement

Replace faulty battery to repair laptop.

Written By: Joseph Lintz



INTRODUCTION


This guide will instruct a user on how to remove the battery in order to replace a potentially faulty piece of hardware. Be sure the device is turned off and disconnected from all power sources.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

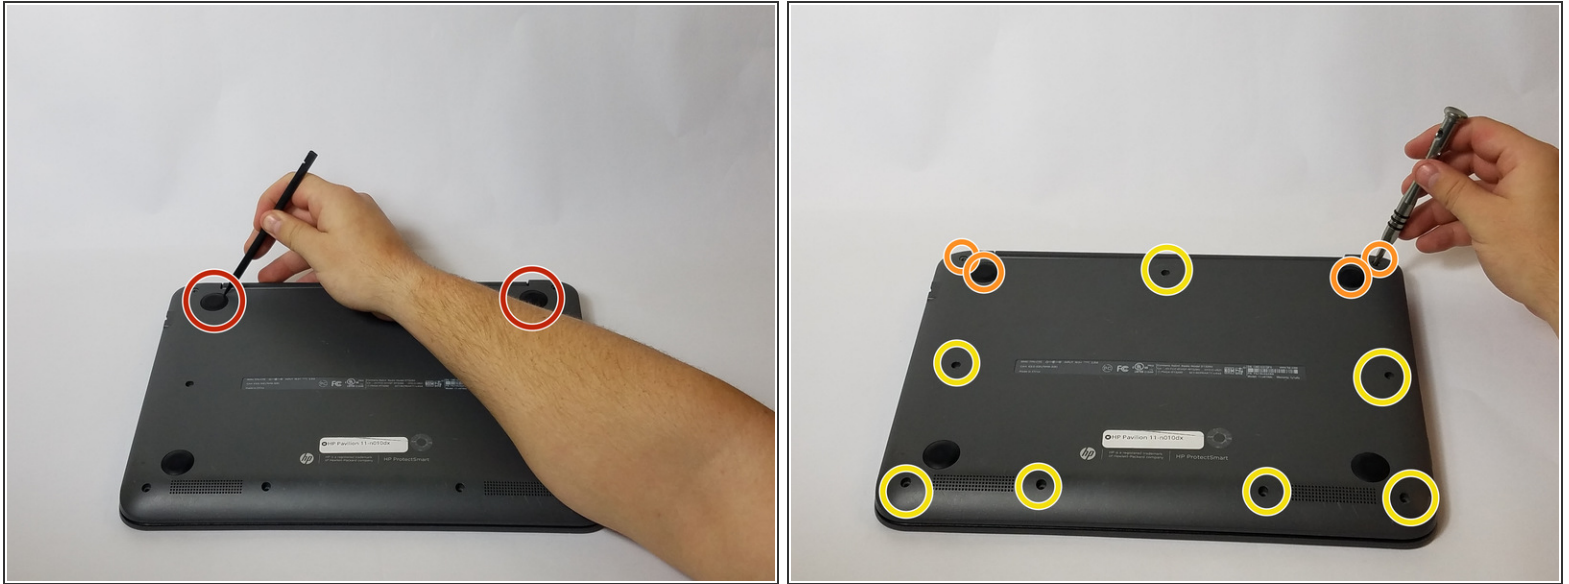

- Use the nylon spudger to remove the rubber pads near the hinge of the screen, then remove the screws under the pads.
- Use the Phillips #0 to remove four 9mm screws.
- Use the Phillips #0 to remove seven 6mm screws.

Step 2



- Use the nylon spudger to pry the back casing near the hinges for the screen.
- Continue to pry along the edge of the back case until the back is ready to be removed.


⚠ Careful when beginning to remove the case. There is a cable attached between the bottom case and the motherboard that must be properly disconnected.

Step 3



- Use the blue plastic opening tool to lift up on the white tab that is holding the cable in place on the motherboard.
- Now carefully pull the cable out of place and remove the entire back casing.

Step 4

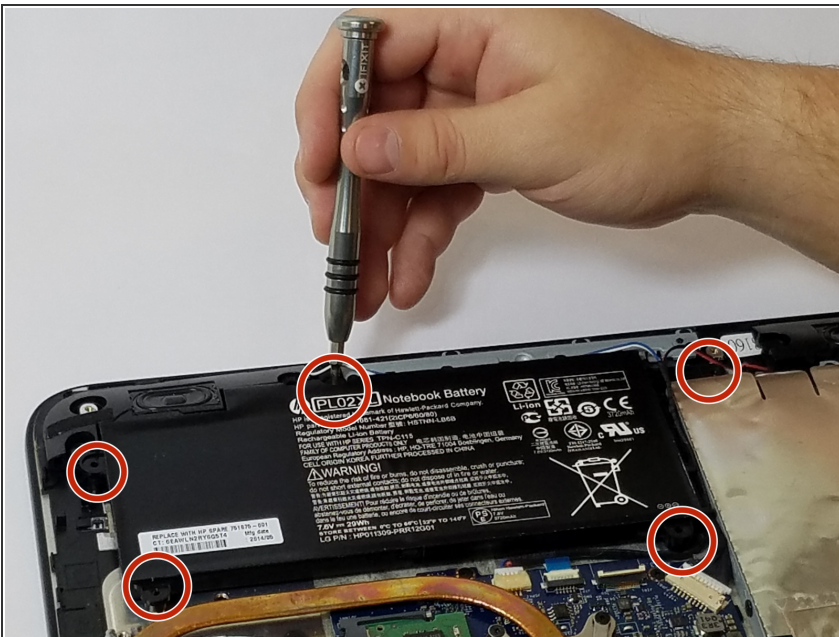

- Remove the five 6mm screws that hold the battery in place using the Phillips #0.

Step 5




- Use the nylon spudger to pry away the blue/white wire that is positioned near your battery.

Step 6



- Disconnect the battery cable from the motherboard by carefully pulling on the black wire at the point closest to the white tab.

Step 7

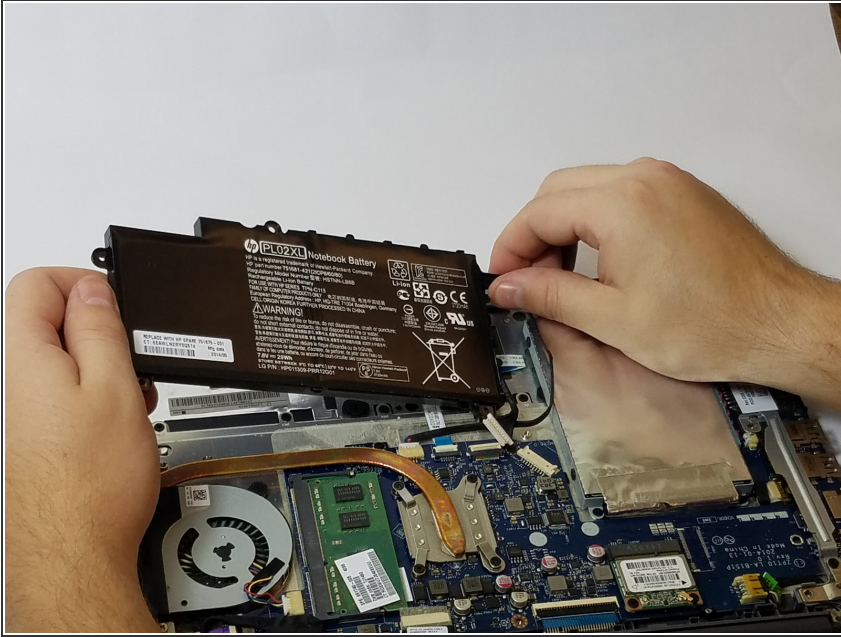

- Remove the battery from your device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 07:34:32 PM.